



## LED SLIMLINE PAR5433



**Flat Par LED fitted with 54 x LED 3watt 3in1 RGB**

**Code: VIS001 (Black)**

## **INSTRUCTION MANUAL**

### **Specification:**

**54 x LED Pixels with Red, Green, and Blue LED's**

**Power Inlet: 240v 50Hz**

**Mains Inlet: cabled**

**DMX: 3Pin Male and Female XLR sockets for inlet/outlet**

**Beam Angle: 25 degree**

**Power Consumption: 45watt**

**Sound Activation: built in microphone**

### **FUNCTIONS:**

The LED Slimline Par 38 has six different functions: -


1. Individual colour selection
2. Manual dimmer on each colour
3. Auto Run Mode
4. Crossfade or colour chase mode
5. DMX control mode
6. Sound Activation mode.

2.

**The rear of the unit: -**



**The Digital Display: -**

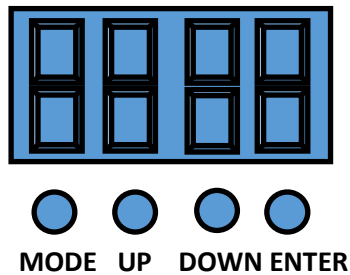

This will allow you to access and set the various functions of the fitting.

**Getting started.**

Switch on the unit and the Digital display will illuminate, by pressing the "Mode" button you will select through the various options of control as follows: -

Display	Function
A001	DMX Function A001 to A512
ADYE	Master (ADYE) or Slave Mode (ADno)
Au01-Au07	Colour Selection 1- 7 different colours
FF00-FF99	Colour Switching (speed control 1-99) slow to fast
EE00-EE99	Colour Fading (speed control 1-99) slow to fast
CC00-CC99	Colour Pulse (speed control 1-99) slow to fast
F000-F250	Strobe Setting (speed control 1-250) slow to fast

Soud	Sound to Light mode white strobing
Sund	Sound to Light mode colour changing
r000-r255	Red LED's Dimming 0-100%
G000-G255	Green LED's Dimming 0-100%
b000-b255	Blue LED's Dimming 0-100%

### **DMX CONTROL**

Select the required DMX channel setting from the Menu A000- A512

The unit operates with 7 channels of DMX which are shown on the table below:-

Channel	Value	Function	Setting
CH1	0-255	Master Dimmer 0-100%	Available in all modes
CH2	0-255	RED Dimming 0-100%	Dimming Mode only
CH3	0-255	GREEN Dimming 0-100%	Dimming Mode only
CH4	0-255	BLUE Dimming 0-100%	Dimming Mode only
CH5	0-255	Strobe (speed slow to fast)	Available in all modes
CH6	0-50	Open Channel 1-5	
	51-100	Colour selection (7 colours)	
	101-150	Colour Switching	
	151-200	Colour Fading	
	201-250	Colour Pulsing	
	251-255	Sound to Light Mode	
CH7	0-255	Speed from Slow to Fast	Available in all modes

### **Troubleshooting:**

**No power**-- check mains voltage is correct, and outlet switched on, check fuse

**No Light output**= check control panel modes, check DMX from controller

**Unresponsive to DMX**- check unit is in DMX mode  
 Check controller is not in blackout mode  
 Check master dimmer level  
 Check correct DMX address has been set  
 Check Connection leads

**Overheating/ cutting out**- ensure adequate ventilation  
 Check fan is running- if not refer to dealer.

### **Importers and Distributors: -**



**Contact Details:** - Website: [www.batmink.co.uk](http://www.batmink.co.uk) E-mail: [info@batmink.co.uk](mailto:info@batmink.co.uk)