

“DOWN” button to adjust the flash speed(OF-99), OF is turn off flash, 01 is the slowest flash speed,99 is the fastest flash speed.

4. Slave mode

Press“MODE” button,select slave mode.At this time,the four digital tube displays “SLAu.”.Press SET UP,UP or DOWN is no use under this mode.

5. DMX mode

Press “MODE” button,select DMX mode.At this time,the four digital tube displays“d. × × ×”.Press “UP” or “DOWN” to select the DMX address 1-512.When there is no controller signal,the four digital tube display will be flash.

The DMX protocol is as follows:

CHANNEL	FUNCTION	
CH1	000-255	Dimmer(dim→bright)
CH2	000-010	Black out
	011-020	ONLY FOR CH1 DIMMER
	021-255	FLASH(slow→quick)

VIS016 Operation Manual

VIS016 is lighting effect which can create decorative effects, it is designed for club, stage and other entertainment hall.

Specification:

1. Weight: 1.5kg
2. Size: 31.5×27.5×10cm
3. Power input: AC100V-240V,50HZ/60HZ
4. Wattage: 30W
5. LEDS: 177pcs UV LED diameter 10mm high intensity
6. Beam angle: 40 degree
7. 3PIN female XLR socket and 3PIN male XLR socket
8. Built-in microphone
9. 4 button LED display
10. Black plastic housing

It has five kinds of operation mode,they are as follows:

Static color select mode ,Auto-run mode, Sound-active mode, Slave mode, DMX mode

Here above five kinds running mode are selected by MODE button. Press MODE and SET UP button at the same time, when it is on,you can initialize it at extra factory setting,running on the auto-run program mode.To make the display stay on all of the time press the MODE and UP buttons at the same time. To make the display turn off after 20 seconds, press the MODE and DOWN buttons at the same time.

1. Static color select mode

Press“MODE ” button, select static color select mode. four digital tube displays “ CL. × × ” , Press “UP” or “DOWN” to select static colors 0-1under this mode.

0---LEDs all off 1---LEDs all on

Then press SET UP button to choose the flash speed set mode.When“FS. × × ” is displayed,press “UP” or “DOWN” button to adjust the flash speed(OF-99), OF is turn off flash, 01 is the slowest flash speed,99 is the fastest flash speed.

2. Auto-run mode

Press “MODE” button, select auto run mode.At this time,the four digital tube displays“AU. × × ” Press UP or DOWN to select the auto run speed grade 01-99 under this mode.(From slow to quick)

Then press SET UP button to choose the flash speed set mode.When“FS. × × ” is displayed,press “UP” or “DOWN” button to adjust the flash speed(OF-99), OF is turn off flash, 01 is the slowest flash speed,99 is the fastest flash speed.

3. Sound-active mode

Press“MODE” button,select sound-active mode.At this time,the four digital tube displays “SU. × ×”.Press UP or DOWN to select sound-active sensitivity grade 00-31.00 is off sound-active,01 is the lowest sensitivity,31 is the highest sensitivity.

Then press SET UP button to choose the flash speed set mode.When“FS. × × ” is displayed,press “UP” or