

VIS0494 Operation Manual

150W QUAD COB LED PAR can make very bright colorful and dynamic light scenery effects. The front operation plant has four digital tube display. You can operate it through the four buttons---MODE,SET UP,UP,DOWN. It can stock running mode when it is off. You can find last running mode when it is on next time. This product has temperature protect function. When it is on,it will be off automatically when the temperature is beyond 85° C. But it won't impact other combined products. When you re-start it,it can run correctly within 85° C.

A, Specification:

1. Weight: 4.1kg
2. Size: 41.5×24.5×19.2cm
3. Power input: AC100V-240V/50Hz-60Hz
4. Wattage:132W
5. LEDs: 1PC 150W (RGBW 4 in 1) COB LED
6. Beam angle of LEDs: 40,50,80 degree available
7. 3PIN female XLR socket and 3PIN male XLR socket
8. Built-in microphone
9. Four button LED digital display
10. Power cord daisy chain:5 fixtures max

B, The function description of the LED light:

It has 7 kinds of operation mode,they are as follows:

Manual dimmer color mode,Sound active mode,Auto-run program mode,Static color select mode,Other program select mode,Slave mode,DMX mode

Here above 7 kinds running mode are selected by MODE button. When you operate it,then the unit will lock the display if there is no operation on the unit over 30 seconds. You have to press and hold down MODE button for 3 seconds before gaining access to the units menu options.

MODE manual	SET UP manual	UP/DOWN manual	Instruction
DMX MODE	Address	1~125	Sets the DMX starting address
		1~3	The unit occupies 3 DMX channels
		1~4	The unit occupies 4 DMX channels
		1~5	The unit occupies 5 DMX channels
	Channels	1~6	The unit occupies 6 DMX channels

	Ch09	The unit occupies 9 DMX channels
NO DMX mode	b/R	When DMX signal is lost or interrupted, the unit will default to BLACKOUT option. It will switch all LED's off
	LRS	When DMX signal is lost or interrupted, the unit will default to HOLD option. It will hold the last state before signal was lost.
	PROG	When DMX signal is lost or interrupted, the unit will default to AUTO option. It will run the internal programs.
SLAVE MODE	Slave mode SLR	Set the unit into slave mode
	Red dimmer F000~C255	Adjust the intensity of the red color
	Green dimmer 6000~6255	Adjust the intensity of the green color
	Blue dimmer 6000~6255	Adjust the intensity of the blue color
DIMMER MODE	White dimmer U000~U255	Adjust the intensity of the white color
	Flash F500~F515	Adjust the flash speed, F500 is flash off, F501 is slowest, F515 is fastest
SOUND MODE	Mode select S001~S016	Select the 16 built-in sound modes
	Sensitivity select 5J~7J~8	Adjust the sensitivity of the sound-active, 5J is the lowest level, 7J~8 is the highest level
AUTO RUN MODE	Dreaming mode set RE01~RE15	Select the 16 built-in dreaming mode
	Jumping mode set RJ01~RJ15	Select the 16 built-in jumping mode
	Auto Dreaming&Jumping mode RJ1F	Set the light in auto dreaming&jumping mode, the dreaming mode and jumping mode will run in a continuous cycle
STATIC COLOR SELECT MODE	Speed set SP01~SP15	Adjust the speed of the dreaming/jumping mode
	Color select CL00~CL64	Select the 64 static colors
	Flash F500~FS15	Adjust the flash speed, F500 is flash off, F501 is slowest, FS15 is fastest
OTHER MODE	Display on/off dOFF	LED digital tube display always on
	Display Stnd	LED digital tube display off
	normal/inverse IN3D	LED digital tube display normal
	Initialization mode dEER	Initialize the unit at the extra factory setting

1. Manual dimmer color mode

2) Manual dimmer color select

Press "MODE" button, select the manual dimmer color select mode. At this time, the four digital tube displays red "E.0.0.0~E.2.5.5", press the "SET UP" to choose different color, green "E.0.0.0~E.2.5.5", blue "E.0.0.0~E.2.5.5", white "E.0.0.0~E.2.5.5", then press "UP" or "DOWN" button to set the dimming rate 0-255.

2) Flash speed select

Press "SET UP" to choose the flash speed select mode. At this time, the four digital tube displays "E.5.0.0~E.5.0.0". Press "UP" or "DOWN" button to select the flash speed 00-15, 00 is flash off, 01 is the slowest flash speed, 15 is the fastest flash speed.

2. Sound active mode

Press "MODE" button, select the sound active program mode. There are two modes in the sound active program mode. You can select them by pressing the "SET UP" button.

1) Sound active program mode select

Press "SET UP" button until the four digital tube displays "E.5.0.0~E.5.0.0", then press "UP" or "DOWN" to select the sound active program mode. You can select them by pressing the "SET UP" button.

2) Sensitivity select mode

Press "SET UP" button until the four digital tube displays "E.5.0.0~E.5.0.0", then press "UP" or "DOWN" to select the sound active the sensitivity 1-8. 1 is off sound-active, 2 is the lowest sensitivity, 8 is the highest sensitivity.

3. Auto-run program mode

Press "MODE" button, select the auto-run program mode. There are three modes in the auto-run program mode. You can select them by pressing the "SET UP" button.

1) Color dreaming program mode select

Press "SET UP" button until the four digital tube displays "E.5.0.0~E.5.0.0", then press "UP" or "DOWN" button to select the sixteen color dreaming programs 1-16.

2) Color jumping program mode select

Press "SET UP" button until the four digital tube displays "E.5.0.0~E.5.0.0", then press "UP" or "DOWN" button to select the sixteen color jumping programs 1-16.

3) Color dreaming/jumping speed select

Press "SET UP" button until the four digital tube displays "E.5.0.0~E.5.0.0". Press "UP" or "DOWN" button to select the color dreaming/jumping speed 01-16, 01 is the slowest speed, 16 is the fastest speed.

4. Static color select mode

Press "MODE" button, select the static color select mode. There are two modes in static color select mode. You can select them by pressing the "SET UP" button.

1) Static color select

Press "SET UP" button until the four digital tube displays "E.5.0.0~E.5.0.0", then press "UP" or "DOWN" to select static color 0-64 under this mode.

2) Flash speed select

Press "SET UP" button until the four digital tube displays "F5.00 ~ F5.15", then press "UP" or "DOWN" button to select the static color flash speed 00-15,00 is flash off,01 is the slowest flash speed,15 is the fastest flash speed.

5. Other program select mode

1) Display off/on select mode

Press "SET UP" button ,select display off/on mode.Press UP or DOWN to select the four digital tube display on/off. When the digital tube displays "D0D0",the display will be automatically off after 60 seconds if there is no operation.

2) Display normal/inversion select mode

Press "SET UP" button ,select display normal/inversion mode.Press UP or DOWN to select the four digital displays "5E7D" means that the digital tube displays normally,when the digital tube displays "DDEE" means that the digital tube displays inversion.

3) Initialization select mode

Press "SET UP" button until the four digital tube displays "DEFB",and the display is flicker.Now press UP button and DOWN button at the same time,you can initialize it at extra factory setting,running on the the first color jumping mode,and the four digital tube displays "HJDJ".

6. Slave mode

Press "MODE"button,select salve mode.At this time,the four digital tube displays "5LRU".Press SET UP,UP or DOWN is no use under this mode.

7. DMX mode

You can control the devices individually via your DMX-controller.

1) DMX address select mode

The control Board allows you to assign the DMX address which is defined as the first channel of the COB LED par.Press " MODE " button until the display is "D0D0 /~D5 /2" , then press UP or DOWN to set the DMX address. The four digital tube display will be flicker when there is no controller signal.

2) DMX-PROTOCOL

Press " SET UP " button until the display is " CH03 /CH04 /CH05 /CH06 /CH09 " , then press UP or DOWN to set the desired channels (3,4,5,6,9).There are total 5 DMX modes.

3) No DMX mode set

Press "SET UP"button until the four digital tube displays "D0D0",then press "UP" or "DOWN" to select the 3 no DMX modes. When the digital tube display "D0D0",it means when DMX signal is lost or interrupted,the unit will default to BLACKOUT option,it will switch all LED's off;when the digital tube display "L R5L",it means when DMX signal is lost or interrupted,the unit will default to HOLD option,it will hold the last state before signal was lost;when the digital tube display "R-DU",it means when DMX signal is lost or interrupted,the unit will default to AUTO option,it will run the internal programs.

CH03: 3 channels mode

Channel	Value	Function
1		COLOR MACROS

	0-255	See Color Macros Chart
2		
	0-31	LED OFF
	32-63	LED ON
	64-95	STROBE SLOW->FAST
	96-127	LED ON
	128-159	STROBE PULSE SLOW->FAST
	160-191	LED ON
	192-223	RANDOM STROBE SLOW->FAST
	224-255	LED ON
3		MASTER DIMMER
	0-255	0% - 100%
E504: 4 channels mode		
Channel	Value	Function
1		
	0-255	RED 0% - 100%
2		
	0-255	GREEN 0% - 100%
3		
	0-255	BLUE 0% - 100%
4		
	0-255	WHITE 0% - 100%
E505: 5 channels mode		
Channel	Value	Function
1		
	0-255	RED 0% - 100%
2		
	0-255	GREEN 0% - 100%
3		
	0-255	BLUE 0% - 100%

4

0-255

WHITE
0% - 100%

5

0-255

MASTER DIMMER
0% - 100%*LH05:* 6 channels mode

Channel	Value	Function
1	0-255	RED 0% - 100%
2	0-255	GREEN 0% - 100%
3	0-255	BLUE 0% - 100%
4	0-255	WHITE 0% - 100%
5	0-31 32-63 64-95 96-127 128-159 160-191 192-223 224-255	STROBE LED OFF LED ON STROBE SLOW->FAST LED ON STROBE PULSE SLOW->FAST LED ON RANDOM STROBE SLOW->FAST LED ON MASTER DIMMER 0% - 100%
6	0-255	

Ch09: 9 channels mode

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9
Red	Green	Blue	White	Strobe	Master	Mode	Multiple Function	Speed/Sen.

Red 0-255 (dim→ bright)	Green 0-255 (dim→ bright)	Blue 0-255 (dim→ bright)	White 0-255 (dim→ bright)		Standard Dim Mode (0-51)	No Function	No function
No function	No function	No function	No function	0-31 LED OFF 32-63 LED ON 64-95 STROBE SLOW->FAST 96-127 LED ON 128-159 STROBE PULSE SLOW->FAST 160-191 LED ON 192-223 RANDOM STROBE SLOW->FAST 224-255 LED ON	Color Macro Mode (Ch8) (52-102)	Color Macros (See Color Macros Chart)	
				0-15 16-31 32-47 48-63 64-79 80-95 96-111 112-127 128-143 144-159 160-175 176-191 192-207 208-223 224-239 240-255	Color Jump 1 Color Jump 2 Color Jump 3 Color Jump 4 Color Jump 5 Color Jump 6 Color Jump 7 Color Jump 8 Color Jump 9 Color Jump 10 Color Jump 11 Color Jump 12 Color Jump 13 Color Jump 14 Color Jump 15 Color Jump 16		
				Dimming 0-255 (dim→ bright)	Color Jump Mode (Ch8) (103-153)	Internal Prog Speed (0-255) (slow→fast) (Ch8)	
					0-15 16-31 32-47 48-63 64-79 80-95 96-111 112-127	Color Dream 1 Color Dream 2 Color Dream 3 Color Dream 4 Color Dream 5 Color Dream 6 Color Dream 7 Color Dream 8	
					Color Dream Mode (Ch8)		

	(154-204)	128-143	Color Dream 9
	144-159	Color Dream 10	
	160-175	Color Dream 11	
	176-191	Color Dream 12	
	192-207	Color Dream 13	
	208-223	Color Dream 14	
	224-239	Color Dream 15	
	240-255	Color Dream 16	
	0-15	Sound Active 1	
	16-31	Sound Active 2	
	32-47	Sound Active 3	
	48-63	Sound Active 4	
	64-79	Sound Active 5	
	80-95	Sound Active 6	
	96-111	Sound Active 7	Sensitivity 0-31=OFF
Sound Mode (Ch8) (205-255)	112-127	Sound Active 8	32-255= insensitive-
	128-143	Sound Active 9	sensitive (Ch8)
	144-159	Sound Active 10	
	160-175	Sound Active 11	
	176-191	Sound Active 12	
	192-207	Sound Active 13	
	208-223	Sound Active 14	
	224-239	Sound Active 15	
	240-255	Sound Active 16	

Color macros chart as below:

Color No.	DMX	RGBW COLOR INTENSITY				Color No.	DMX	RGBW COLOR INTENSITY			
		VAULE	RED	GREEN	BLUE	WHITE		VAULE	RED	GREEN	BLUE
Color0(off)	0	0	0	0	0	Color33	129-132	255	206	143	0
Color1	1-4	80	255	234	80	Color34	133-136	254	177	153	0
Color2	5-8	80	255	164	80	Color35	137-140	254	192	138	0

Color3	9-12	77	255	112	77	Color36	141-144	254	165	98	0
Color4	13-16	117	255	83	83	Color37	145-148	254	121	0	0
Color5	17-20	160	255	77	77	Color38	149-152	176	17	0	0
Color6	21-24	223	255	83	83	Color39	153-156	96	0	11	0
Color7	25-28	255	243	77	77	Color40	157-160	234	139	171	0
Color8	29-32	255	200	74	74	Color41	161-164	224	5	97	0
Color9	33-36	255	166	77	77	Color42	165-168	175	77	173	0
Color10	37-40	255	125	74	74	Color43	169-172	119	130	199	0
Color11	41-44	255	97	77	74	Color44	173-176	147	164	212	0
Color12	45-48	255	71	77	71	Color45	177-180	88	2	163	0
Color13	49-52	255	83	134	83	Color46	181-184	0	38	86	0
Color14	53-56	255	93	182	93	Color47	185-188	0	142	208	0
Color15	57-60	255	96	236	96	Color48	189-192	52	148	209	0
Color16	61-64	238	93	255	93	Color49	193-196	1	134	201	0
Color17	65-68	196	87	255	87	Color50	197-200	0	145	212	0
Color18	69-72	150	90	255	90	Color51	201-204	255	0	0	0
Color19	73-76	100	77	255	77	Color52	205-208	0	255	0	0
Color20	77-80	77	100	255	77	Color53	209-212	0	83	115	0
Color21	81-84	67	148	255	67	Color54	213-216	0	97	166	0
Color22	85-88	77	195	255	77	Color55	217-220	1	100	167	0
Color23	89-92	77	234	255	77	Color56	221-224	0	40	86	0
Color24	93-96	158	255	144	144	Color57	225-228	209	219	182	0
Color25	97-100	255	251	153	153	Color58	229-232	42	165	85	0
Color26	101-104	255	175	147	147	Color59	233-236	0	46	35	0
Color27	105-108	255	138	186	138	Color60	237-240	8	107	222	0
Color28	109-112	255	147	251	147	Color61	241-244	107	156	231	0
Color29	113-116	151	138	255	138	Color62	245-248	165	198	247	0
Color30	117-120	151	138	255	138	Color63	249-252	0	0	255	0
Color31	121-124	138	169	255	138	Color64	253-255	0	0	0	255
Color32	125-128	255	255	255	255						