

# LED SPIDER LIGHT

Stock code: VIS070



## INSTRUCTION MANUAL

### Specifications

**LED's:** 8 x 6 watt RGBW

**Power:** 55watts

**Power Inlet:** 240v 50Hz

**Mains Inlet/Outlet sockets:** IECC 3pin

**DMX connection:** 3pin XLR Male and 3 pin XLR Female

**DMX Channels:** 7 Channel or 15 channel

**Control Modes:** DMX, master/Slave Mode, Sound Activation, Auto run

**Dimmable:** 0-100%

**Beam angle:** 4.5 degrees


**Rotation angle:** 180 degrees

**Dimensions:** 285mm length x 165mm width x 126mm height

**Weight:** 1.9Kg

## 2.

### Digital Display and Menu

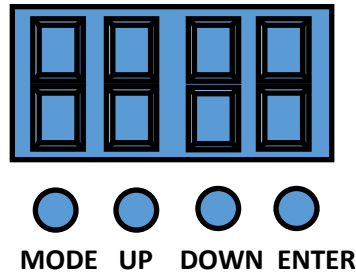

Switch on the unit and the two moving parts will reset themselves to the start point.

Using the menu below select the MENU pattern you require:

READING	FUNCTION
<b>Addr</b>	This sets the DMX address A001-A512
<b>Chnd</b>	Selects DMX mode from 7 channel or 15 channel
<b>SLnd</b>	MAST, SLAV, Soun (selects Master, Slave or sound operation
<b>Shnd</b>	Sh1—Sh24 the selection of effects, Sh24, multi effects SPED- amends the speed of the chase from 01-08.
<b>Soud</b>	ON, OFF sound control switch
<b>SoEn</b>	Sound Control Sensitivity 0=off, 100= most sensitive
<b>LED</b>	ON, OFF display lighting
<b>DISP</b>	YES, NO reverse display
<b>1TiL</b>	YES, NO Motor 1 is reversed
<b>2TiL</b>	YES, NO Motor 2 is reversed
<b>TEST</b>	Automatic testing
<b>DEFT</b>	YES, NO restore to factory settings

#### MASTER/SLAVE MODE:

If you require one unit to act as the master and multiple units to simply repeat, this can be achieved by selecting **SLnd** on the menu, then press **ENTER**, then press **UP** or **DOWN** button until the display reads **MAST**, you have now selected this unit to become the master.

Using the same process for each additional unit select **SLAV** this will create the slave units. Link each unit via the DMX in and out sockets with XLR leads and the units are ready to operate in sync.

3.

**DMX OPERATION:**

The unit has two modes of DMX operation either 7 channels or 15 channels. Using the menu buttons select the units to the desired channel **Chnd**.

You then need to set the DMX channel of each channel, firstly select **Addr** on the menu and press **ENTER**, then using the **up** and **down** buttons select the DMX channel required, once selected press **ENTER** to confirm.

**7 Channel DMX operation**

DMX Channel	Function	DMX Value	Function
1	Motor 1 Travel	0-255	60'—150'
2	Motor 2 Travel	0-255	60'- 150'
3	Dimming	0-255	0-100%
4	Strobe	0-9 static	10-255 Speed
5	Pre-Programmed Effects. 1-23	0-7	No Effect
		8-17	Effect 1
		18-27	Effect 2
		28-37	Effect 3
		38-47	Effect 4
		48-57	Effect 5
		58-67	Effect 6
		68-77	Effect 7
		78-87	Effect 8
		88-97	Effect 9
		98-107	Effect 10
		108-117	Effect 11
		118-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
		157-166	Effect 16
		167-176	Effect 17
		177-186	Effect 18
		187-196	Effect 19
		197-206	Effect 20
		207-216	Effect 21
		217-226	Effect 22
227-236	Effect 23		

4.

**DMX 7 Channel Operation continued-**

DMX Channel	Function	DMX Value	Function
5 continued	Motor control	237-246	Effect 24 Multi-effect self-propelled, the motor runs automatically
		247-255	Effect 25 Sound Control
6	Effect Speed	0-255	From slow to fast
7	Reset	241-250	Hold for 5 seconds to reset the unit.

**15 channel DMX Operation**

DMX Channel	Function	DMX Value	Function
1	Motor 1 Travel	0-255	60' – 150'
2	Motor 2 Travel	0-255	60' – 150'
3	Dimming	0-255	0-100%
4	Strobing	0-9 static	10-255 strobe speed
5	LED 1 Dimming	0-255	0 – 100%
6	LED 2 Dimming	0-255	0 – 100%
7	LED 3 Dimming	0-255	0 – 100%
8	LED 4 Dimming	0-255	0 – 100%
9	LED 5 Dimming	0-255	0 – 100%
10	LED 6 Dimming	0-255	0 – 100%
11	LED 7 Dimming	0-255	0 – 100%
12	LED 8 Dimming	0-255	0 – 100%
13	Pre-Programmed Effects. 1-23	0-7	No Effect
		8-17	Effect 1
		18-27	Effect 2
		28-37	Effect 3
		38-47	Effect 4
		48-57	Effect 5
		58-67	Effect 6
		68-77	Effect 7
		78-87	Effect 8
		88-97	Effect 9
	Effect 10		

## 5.

**DMX 15 Channel operation continued:**

DMX Channel	Function	DMX Value	Function
13	Pre-Programmed Effects 1-23 24 and 25 affects the motors regarding colours and automatic	98-107	Effect 10
		108-117	Effect 11
		118-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
		157-166	Effect 16
		167-176	Effect 17
		177-186	Effect 18
		187-196	Effect 19
		197-206	Effect 20
		207-216	Effect 21
		217-226	Effect 22
		227-236	Effect 23
237-246	More than 24 effects automatic		
247-255	Effect 25 Voice Control		
14	Effect Speed	0-255	From slow to fast
15	Reset	241-250	Hold for 5 seconds to reset



This product is distributed in the UK by

**Beckery Road, Glastonbury, Somerset, BA6 9NX**

**Telephone: 01458.833186**

**E-mail: [info@batmink.co.uk](mailto:info@batmink.co.uk)**

**Website: [www.batmink.co.uk](http://www.batmink.co.uk)**