


**VIS124 Visage  
MINI Moving Head with IR  
Remote**

---

**User Manual**

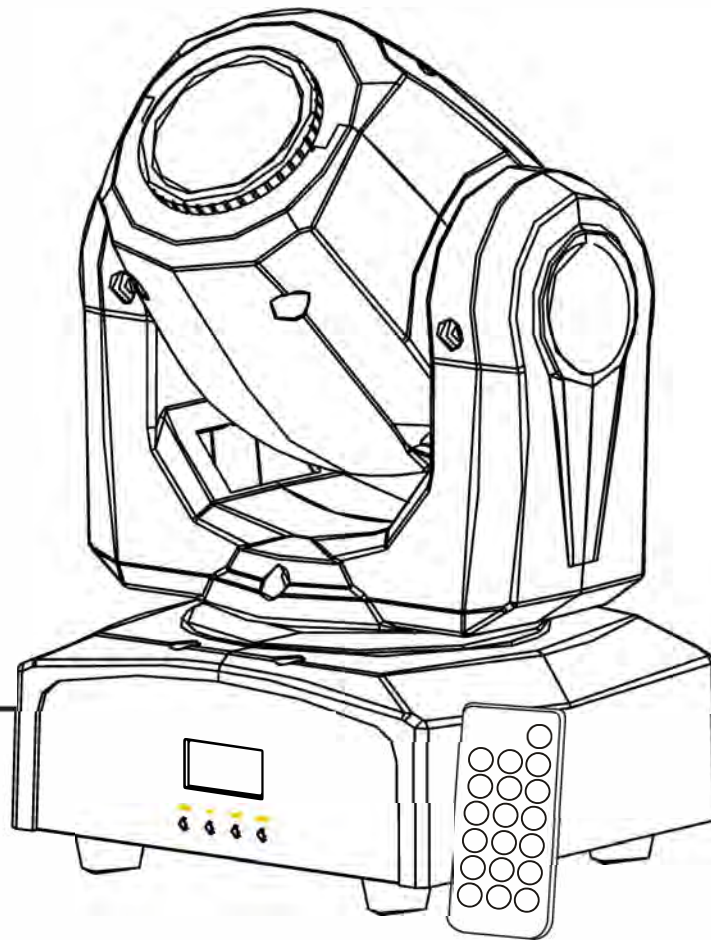

Please read the instructions carefully before use



### WARNING

Please read the instructions carefully which includes important information about the installation, operation and maintenance.

- Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- All fixtures are intact from the manufacturer, please operate follow up the user manual, artificial fault are not under guarantee repair.
- Unpack and check carefully that there is no transportation damage before using the unit.
- The unit is for indoor use only. Use only in a dry location.
- Do install and operate by operator.
- Use safety chain when fixes the unit. Don't handle the unit by taking its head only, but always by taking its base.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces.
- Be sure that no ventilation slots are blocked, otherwise the unit will be overheated.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Maximum ambient temperature TA : 40°C. Don't operate it where the temperature is higher than this.
- Don't connect the device to any dimmer pack.
- First run, there will be smoke or smells, and all disappearing a few minutes later.
- Make sure there are no flammable materials close to the unit while operating, as it is fire hazard.
- Look over power wires carefully, replace immediately if there is any damage.
- Never run on for a long time lest shortening lifespan.
- Avoid any inflammable liquids, water or metal objects entering the unit. Once it happen, cut off the mains power immediately.
- Do not operate in dirty and dusty environment, also cleaning fixtures regularly.

- Do not allow children to operate the fixture.
- Do not touch any wire during operation as there might be a hazard of electric shock.
- Avoid power wires together around other cables.
- Disconnect mains power before fuse/lamp replacement or servicing.
- Replace fuse only with the same type.
- In the event of serious operating problem, stop using the unit immediately.
- Never turn on and off the unit time after time.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- Do not open the unit as there are no user serviceable parts inside.
- Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.
- Disconnect the mains power if the fixture is not used for a long time.
- Do use original packing materials once transport it again.
- Do not look directly at the LED light beam while the fixture is on.



For power supply, do not connect in series much more than 7 units, use another mains supply for next 7 units.

## Installation

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.

The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people and has no one pass by or under it.

## Technical Specifications

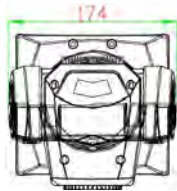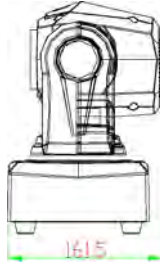

- High output mini Moving Head with a bright white 12W LED source
- 7 Colors + white
- 7 fixed GOBOS + open
- Manual focus
- 5 Operational modes: DMX, Sound Active, Internal Show & IR control Master/Slave
- control modes 3 DMX channel modes: 5/9/11 Channel modes
- 7 Built-in shows
- Gobo Shake effect
- Gobo scroll mode
- Beam Angle: 13-degrees • 540° pan / 230° tilt (16-bit)
- Pan /Tilt Inversion mode
- Shutter: Pulse effect; random strobe slow to fast
- Dimming: 0% - 100%
- Fan Cooled • Omega bracket included • Linkable: DMX via 3-pin XLR cable

## SETTING UP OF THE FIXTURE

Button operation from left to right:

Mode UP DOWN(DN) ENTER(ENT)

Press Mode key and then enter to adjust settings

Use up and down keys to navigate through the menus

UP : Up to browse, Increasing the data button

DN : Down to browse, Diminishing the data button

ENT : Enter Displayed menu

Press ESC once to return to previous menu. Long press ESC, will quit menu

Menu Navigation:

DN▲ ▼UP

Set menu ◀SET A001 ENT ▶DMX menu

DN▲ ▼UP

Set menu ◀SET Whi ENT ▶screen menu

DN▲ ▼UP

Set menu ◀SET PRG1 ENT ▶program menu

DN▲ ▼UP

Set menu ◀SET PRG2 ENT ▶program menu

DN▲ ▼UP

Set menu ◀SET PRG3 ENT ▶program menu

DN▲ ▼UP

Set menu ◀SET PRG4 ENT ▶program menu

DN▲ ▼UP

Set menu ◀SET PRG5 ENT ▶program menu

DN▲ ▼UP

Set menu ◀SET PRG6 ENT ▶program menu

DN▲ ▼UP

Set menu ◀SET PRG7 ENT ▶program menu

DN▲ ▼UP

Set menu ◀SET Sond ENT ▶program menu

DN▲ ▼UP

1. Set Menu			
SET	Set menu	MACH	Machine use ?me
RELD	reloaded	THIS:0000M	This ?me: 000m
ON		TOTL:0000H	Total ?me: 000h
OFF		CTOT	Removal of total ?me
RST	reset	YES	
ON		NO	
OFF		RDIS	reverse display
MAAL	mainframe/stand-alone set	ON	on
MAST	mainframe	OFF	off
ALON	stand-alone	MSet	Motor set
AUSO	auto/sound set	blko	
AUTO	auto	ON	Blackout on-When moving the head of unit, light off
SOND	sound	OFF	
MIC	Microphones sensi?vity	MCal	Mcal ( Password: 001)
SU60		Pan	Pan
CLDI	clear display	orig	orig set
OFF	turn on	Half	half set
ON	late release	Test	test
LOCK	keyboard lockout	Rst	reset
ON	a?er 30s, lock keyboard. Unlock:mode-down-up-enter	Rev	reverse
OFF		Tilt	Tilt
INFO	INFO	Colr	Color
LED Fix		Gobo	Gobo
Data: mmm dd yyyy	Data	Rec	Screen
Time: hh:mm:ss	Time	Whi	The current scenario is stored in the Whi
		Yes	
		No	
		Adv advanced menu (This for Password management)-Password:638	

2. DMX menu	
DMX	
+ADDR:001	
+CHS	Channel Mode (every mode can be customized by user) 5/9/11channel mode
5/9/11Ch	
Channel customies Mode	DMX info pause
+BRK	STOP RUNNING
STOP	keep running
HOLD	auto running
AUTO	sound running
SOND	DMX display
DISP	Display DMX address
+ADDR	Display DMX value
VALU	Display metabolic DMX value
+Ch00	Display the 1th chs DMX value
+Ch01	isplay the 2th chs DMX value
+Ch02	isplay the 3th chs DMX value
+Ch03	isplay the 4th chs DMX value
+Ch04	
+....	


3. Screen Menu	
SCN	
+Dim:000	Dimmer
+Stb:000	Strobe
+Pan:000	
+PanF:000	
+PanS:000	
+Tilt:000	
+TltF:000	
+TltS:000	
+Colr:000	
+Gobo:000	
+Stb1:000	Lamp Head1Strobe
+Whi1:000	Lamp Head1White

4. Program Menu	
Prog	
+Sped:000	Program spread
+Dim:000	Dimmer
+Stb:000	Strobe

## The product installation considerations


- 1.A mounting clamp must be able to support more than two times the weight of the unit.
- 2.A safety bond must be used and be able to support at least three times the weight of the unit

Please see diagram for correct installation procedure  
Incorrect installation could damage the unit and void the warranty

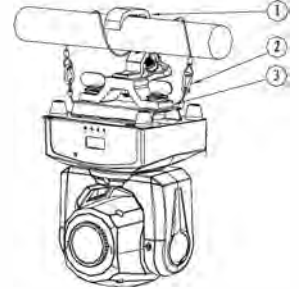

## DMX512 Connections

The DMX512 is widely used in intelligent lighting control, with a maximum of 512 channels.

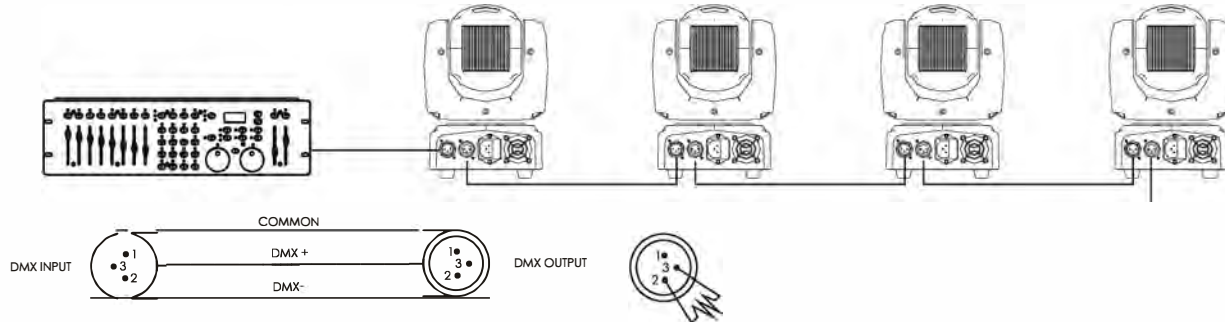

Introductions:

1. Master-Slave set.
  - 1> Disconnect DMX controller
  - 2> Put the slave units into DMX mode
  - 3> Set master unit to internal program



## Fixture Cleaning

The cleaning of internal must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the fixture's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

## 5CH Channel mode

1 CH	2 CH	3 CH	4 CH	5 CH
Pan Rotation	Tilt Rotation	Motor Running Speed	Color	Master Dimmer
			<p>000 - 010 white 011 - 021 red 022 - 032 orange 033 - 043 yellow 044 - 054 green 055 - 065 blue 066 - 076 cyan 077 - 087 purple 088 - 175 colour selection+ 176 - 255 colour wheel rotation</p>	<p>000-255 Master Dimmer 0-100%</p>

## 9CH Channel mode

1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH	8 CH	9 CH
Pan Rotation	Tilt Rotation	Pan Fine	Tilt Fine	Motor Running Speed	Color	Gobo	Master Dimmer	Strobe
					<p>000 - 010 white 011 - 021 red 022 - 032 orange 033 - 043 yellow 044 - 054 green 055 - 065 blue 066 - 076 cyan 077 - 087 purple 088 - 175 colour selection+ 176 - 255 colour wheel rotation</p>	<p>000 - 124 Gobo selection 125 - 249 shaky Gobo selection 250 - 255 Gobo wheel rotation</p>	<p>000-255 Master Dimmer 0-100%</p>	<p>000-009 No Function (Open) 010-255 Strobe slow-fast (1Hz-25Hz)</p>

# 11CH Channel mode

1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH	8 CH
Pan Rotation	Tilt Rotation	Pan Fine	Tilt Fine	Motor Running Speed	Color	Gobo	Master Dimmer
<p>255 100%</p> <p>0 0%</p>	<p>255 100%</p> <p>0 0%</p>	<p>255 100%</p> <p>0 0%</p>	<p>255 100%</p> <p>0 0%</p>	<p>255 100%</p> <p>0 0%</p>	<p>255</p> <p>000 - 010 white 011 - 021 red 022 - 032 orange 033 - 043 yellow 044 - 054 green 055 - 065 blue 066 - 076 cyan 077 - 087 purple 088 - 175 colour selection* 176 - 255 colour wheel rotation</p>	<p>255</p> <p>000 - 124 Gobo selection 125 - 249 shaly Gobo selection 250 - 255 Gobo wheel rotation</p>	<p>255</p> <p>000-255 Master Dimmer 0-100%</p>

9 CH	10 CH	11 CH
Strobe	Scence & Programs	Speed
<p>255</p> <p>000-009 No Function (Open)</p> <p>010-255 Strobe slow-fast (1Hz-35Hz)</p> <p>0</p>	<p>255</p> <p>000-049 No Function 050-059 Whi 060-069 SC02(Empy) 070-079 SC03(Empy) 080-089 SC04(Empy) 090-099 SC05(Empy) 100-109 SC06(Empy) 110-119 SC07(Empy) 120-129 SC08(Empy) 130-139 SC09(Empy)</p> <p>140-149 PRG1 150-159 PRG2 160-169 PRG3 170-179 PRG4 180-189 PRG5 190-199 PRG6 200-209 PRG7 210-219 PRG8(Empy) 220-229 PRG9(Empy) 230-233 (Empy) 234-236 ReSet 237-249 (Empy) 250-255 Sound Mode</p> <p>0</p>	<p>255 100%</p> <p>0 0%</p>

## Remote Operation

The **UC-IR** infrared remote gives you control of various functions (see below).

To control the fixture you must aim the remote at the front of the fixture and be no more than 30 feet away.

**STAND BY**-Pressing this button will blackout the fixture, the display of fixture will be displayed STOP, then the fixture was entered into the UC-IR mode.

**FULL ON**-Pressing this button to fully light up the unit, the display of fixture will be displayed UHI(white). Then you can operate the other steps of UC-IR function.

**1-9 BUTTONS** for X,Y fine-1 for X- & Y+, 2 for Y+, 3 for X+ & Y+, 4 for X-, 5 for center, 6 for X+, 7 for X- & Y-, 8 for Y-, and 9 for X+ & Y-.

**GOBO**-Pressing this button to enter Gobo mode. Use The 1-7 buttons to select your desired gobo. Adjust the output intensity using the "DIMMER +" and "DIMMER -" buttons.

**"DIMMER +" and "DIMMER -"**-use these buttons to adjust the out intensity.

**STROBE**- This button will activate the strobe Use the 1-7 buttons to select your desired strobe

**COLOR**-Pressing this button to enter COLOR mode. Use the 1-7 buttons to select your desired gobo. Adjust the output intensity using the "DIMMER +" and "DIMMER -" buttons.

**SOUND ON & OFF**-These buttons activate and deactivate the sound active mode. (Sound mode must be operated under the show mode)

**SHOW**-This activates the show mode. Use the 1-7 buttons to select your desired built-in programs.



