

ELECTRIC CONFETTI/ STREAMER CANON

Available in Single and Twin Shot Versions



Instructions for use

Electric Confetti Canon 1 Shot (EFF510)

- Dimensions: 15cm x 20cm x 21cm
- Weight: 3.6Kg
- Voltage; 240volt
- Power: 25watt
- Spray Range: dependent on Canon Cartridges used
- DMX Controllable



Electric Confetti Canon 2 shot (EFF512)

- Dimensions: 30cm x 20cm x 21cm
- Weight: 6.8Kg
- Voltage: 240volt
- Spray Range: dependent on Canon Cartridges used
- DMX Controllable

To obtain the best performance from your electric canons please read the instructions before use.

1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
2. This machine is designed to be used in conjunction with the range of Electric Canons either streamers or confetti products which are purchased separately.
3. When using the product aim above the heads of people, never point the product at a person.

EFX (Entertainment FX)

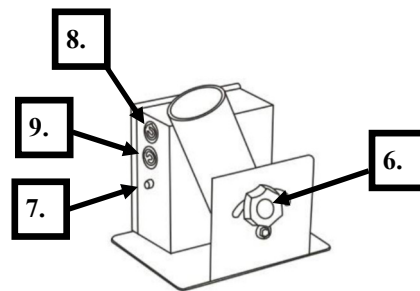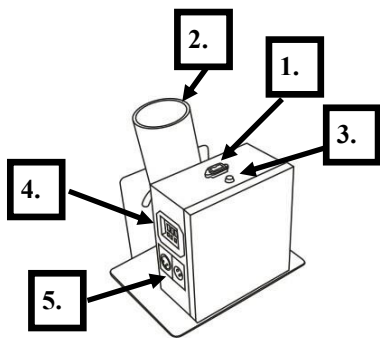

1. **Electric Confetti/Streamer Cable Socket**
2. **Holder for Confetti/Streamer Canon**
3. **LED Indicator on Canon Connection (Green– OK, Red– No)**
4. **DMX Dip Switches to address DMX**
5. **DMX In and Out Connection (XLR)**
6. **Angle Adjustment Knob**
7. **Power Indicator (Red is “On”)**
8. **Power Con Input socket (240v)**
9. **Power Con Output socket (240v)**

OPERATION:

1. Place the machine where required and adjust the angle of firing using the **adjustable knob (6)**.
2. Connect the machine via DMX cables **(5)**.
3. Connect the power cables **(8/9)** and switch on, the power LED will illuminate and the DMX indicator (green) will illuminate. You can adjust the DMX channel setting using the **dip switches (4)**. Each unit is a single channel DMX, the two shot machine will be 2 channels of DMX.
4. Place your electric streamer or confetti Canon in the **holder (2)** and tighten the screw.
5. Place the cable from the electric Canon into the **Cable Socket (1)** the indicator will illuminate green if all operational.
6. You can fire the machine from your DMX controller by engaging the DMX channel you have selected.
7. After firing disconnect the power supply and remove the spent Canons.
8. Reload if you wish to use again and follow the above procedure.



TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Power Indicator is not "ON", no power	Power cable is not connected	Check power cable
Indicator on the Canon is not illuminated when canon is connected.	Electric Confetti/Streamer Canon is no good	Change the Electric Canon for a replacement and reconnect.
The Unit shows Power on but does not work	DMX Cable is not connected	Check the DMX connections
	DMX address has not been set or exceeds 512	Set the correct DMX address
Confetti Spray is not high enough	Problem with the Electric Canon	Change the Electric Canon
The Electric Canon is not firing in the correct sequence	DMX Cable is not Connected	Check the cabling and DMX address

Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.

Distributed in the UK by



Tel: 01458.833186

E-mail: info@batmink.co.uk

Web: www.batmink.co.uk