

CONFETTI MACHINE TRUSS MOUNT



Instructions for use

Confetti Machine (EFF520)


- Dimensions: 75cm x 75cm x 42cm
- Weight: 9.5Kg
- Voltage: 240v 50hz
- Power use: 110w
- Spray Range: 80m2 at a 10m height
- 1.5Kg capacity
- Manual and DMX operated
- Digital display
- Operation time to empty 30 seconds

To obtain the best performance from your Confetti Machine please read the instructions before use.

1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
2. This machine is designed to be used in conjunction with confetti products which are purchased separately.
3. The product operates best at a height of 10metres.
4. The product is for indoor use only.
5. Never leave the unit running unattended.
6. Disconnect the power when not in use.
7. Position the machine in a well ventilated area ideally hanging from a central point.

EFX (Entertainment FX)

 FIGURE 1.

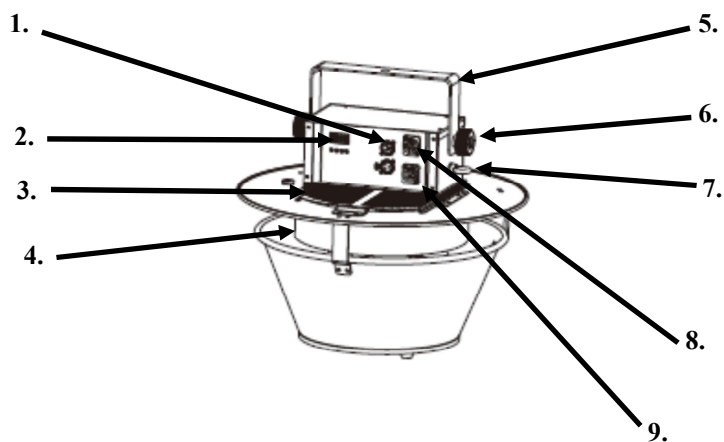

1. DMX Socket 3Pin In/Out
2. Digital Display Panel
3. Net
4. Confetti Nozzle
5. Hanging Bracket
6. Knob
7. Safety Ring (secondary Fixing)
8. Power in
9. Power Out

FIGURE 2


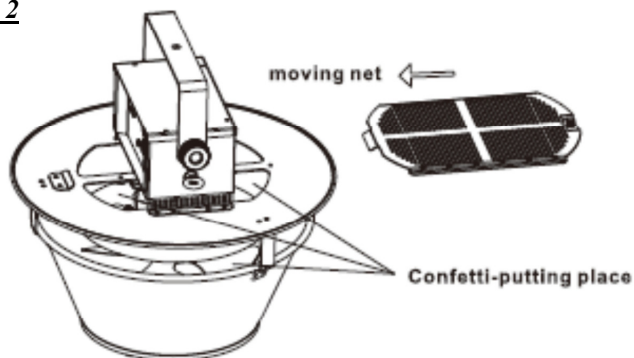 


FIGURE 3

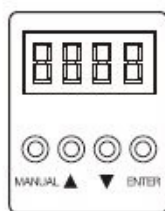 

"MENU": Menu; "▲": Increase; "▼": Decrease; "ENTER": confirmation;

EFX (Entertainment FX)

OPERATION:

To fill the machine use a paper confetti this can be added by sliding the grille to one side and then fill the confetti bowl (as shown in figure 2).

Fix the Confetti Canon in the ceiling of your venue using the bracket (5) and the necessary hook clamp (not supplied). Always ensure a secondary fixing such as a safety chain (not supplied) is attached to the safety ring (7). Once installed run your power lead and DMX cable if operating using DMX.

MANUAL OPERATION

The machine can operate on either manual mode or DMX, to operate the machine manually you simply press “Manual” and “Enter” at the same time, this will start the machine, to stop the machine press the “Manual” and “Enter” buttons together again. You can set this operation on the machine and then simply switch the mains power on and off.

DMX OPERATION

1. Set the DMX address using the Up and Down keys on the Digital Display ▲ (2) ▼
2. The unit uses a single channel of DMX and once set can be operated from a simple DMX desk in either an “On” or “Off” mode .

When operating the machine at a height of 10metres the spread of the confetti will be approximately 80m².

To empty the machine will take approximately 5 seconds.



PROBLEM	REASON	SOLUTION
Machine does not work	Mains power has not been connected	Check mains power lead has been connected.
Machine humming but not rotating	Something has jammed the mechanism.	Check inside the confetti container that nothing has jammed the mechanism
Confetti only falls a short distance	Machine has been installed at a very low height	Ideal height is 10metres, lower heights will reduce the spread of the machine

Specification

◆ Technical parameters

Model:	Swirl Confetti Fan
Voltage:	AC 220-240 V, 50/60 Hz
Fuse:	F2 A/250 V
Power:	110 W
Control:	Manual and DMX control
DMX-512:	✓
Max Coverage:	80 m ² (hang 10 m high)
Max Capacity:	150 g
Max Output Time:	5 s
N. W.:	9.5 kg
G. W.:	11.5 kg
Machine Size:	445/445/368 mm
Package Size:	525/525/420 mm

Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.

Distributed in the UK by



Tel: 01458.833186

E-mail: info@batmink.co.uk

Web: www.batmink.co.uk