

Handheld CO2 Gun



Instructions for use

CO2 Handheld Gun (EFF600)

- Dimensions: 48cm x 24cm x 16cm
- Weight: 3.5Kg (excludes CO2 Canister)
- Voltage; None
- Spray Range: 6-7metres
- Simple Operation and repeat Use.
- Comes with 3metre hose.

To obtain the best performance from your CO2 Gun please read the instructions before use.

1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
2. This machine is designed to be used in conjunction with a CO2 Gas Cylinder which are purchased separately.
3. When using the product aim above the heads of people, never point the product at a person.

EFX (Entertainment FX)



- 1. Nozzle for exiting CO2 spray**
- 2. Hose connection point to CO2 Canister**
- 3. Handle**
- 4. Trigger for operation**

OPERATION:

1. Locate your CO2 bottle in a safe place and connect the 3metre hose to the bottle.
2. Connect the opposite end of the hose to the CO2 gun (2).
3. Please wear gloves when using the CO2 Gun as the device becomes very cold..
4. Turn on the valve on the CO2 Gas bottle.
5. Point the gun in the required direction and squeeze the trigger.
6. For best results use short sharp bursts by squeezing and releasing the trigger.
7. After use unscrew the CO2 Canister. Note; Wear gloves when handling the CO2 canister to avoid a freeze injury.

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Gas leakage from CO2 canister	When connecting the CO2 canister you have not tightened the connection.	Check the connection and ensure there are no leaks, recommend using a Jubilee clip for a secure fit.
Leaking of gas on the CO2 gun.	Loose connection on the hose.	Use a Jubilee clip to ensure a tight fit and no leak.
CO2 leakage from the Nossle	A little leakage is normal	Check the Trigger has reset correctly, quickly press and release and this may cure the issue.
CO2 leakage when attached to the device	The Gas storage tank has become defective	Contact the dealer and replace the unit.

Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.

Distributed in the UK by



Tel: 01458.833186

E-mail: info@batmink.co.uk

Web: www.batmink.co.uk