



- Dimensions: 29cm x 26cm x 23cm
- Weight: 6.6Kg (excludes CO2 Canister)
- Voltage; 240volt Ac 50hz
- Spray Range: 8-10metres
- Simple Operation and repeat Use.
- DMX operation (single channel).

1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
2. This machine is designed to be used in conjunction with a CO2 Gas Cylinder which are purchased separately.
3. When using the product aim above the heads of people, never point the product at a person.

# **EFX** (Entertainment FX)



1. **Nozzle for exiting CO2 spray**
2. **DMX Display and Setting**
3. **Hose connection point to CO2 Canister**
4. **Mains Power outlet**
5. **Mains power On switch**
6. **DMX In/Out via XLR 3 Pin Connector**
7. **Mains Inlet**

## **OPERATION:**

1. Locate your CO2 bottle in a safe place and connect the hose to the bottle.
2. Connect the opposite end of the hose to the CO2 Jet (3).
3. Please wear gloves when connecting the CO2 hose as the device becomes very cold in the event of a leak.
4. Turn on the valve on the CO2 Gas bottle.
5. Connect the mains lead (6) and power the device by switching on (5)
6. Set DMX channel allocation using the Display and up/down buttons (2).
7. Connect the DMX cables to your controller
8. The Unit uses one channel of DMX, once set up simply switch on channel to operate.
7. Wear gloves when handling the CO2 canister to avoid a freeze injury.

## **SPECIAL NOTES**

**The blast time is a maximum of 10 seconds in duration**

**You must leave at least 5 seconds between each blast**

## TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Gas leakage from CO2 canister	When connecting the CO2 canister you have not tightened the connection.	Check the connection and ensure there are no leaks, recommend using a Jubilee clip for a secure fit.
Leaking of gas on the CO2 Jet.	Loose connection on the hose.	Check the fittings and ensure secure fit.
Unit does not power up	Mains not connected or a fuse has blown.	Check mains cable connection. Check mains fuse and replace if blown. Note: if the fuse blows again then do not use and return to dealer.
DMX not working	DMX address not set, DMX cable not connected or broken	Ensure DMX address is set and check cable connection.

## Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.

Distributed in the UK by



Tel: 01458.833186

E-mail: [info@batmink.co.uk](mailto:info@batmink.co.uk)

Web: [www.batmink.co.uk](http://www.batmink.co.uk)