

## **Big Bubble Machine**



## **Instructions for use**

 
### **Big Bubble Machine (EFF700)**

- Dimensions: 53cm x 49cm x 50cm
- Weight: 10Kg
- Voltage: 240voly 50hz
- Wand Speed: 60rpm
- Spray Range: 6-8metres
- Simple Operation and repeat Use.

**To obtain the best performance from your bubble machine please read the instructions before use.**

1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
2. This machine is designed to be used in conjunction with bubble fluid which is purchased separately.
3. When using the product keep the unit level, the design of the machine will blow the bubbles above the heads of people.

# EFX (Entertainment FX)

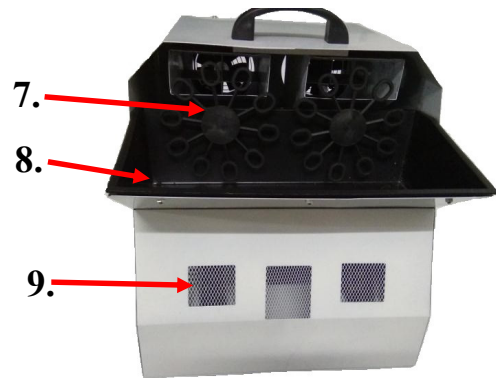

1. **Mains power inlet**
2. **On/Off mains switch and**
3. **Remote control on/off**
4. **Fluid Drain Tap**
5. **Remote Control**
6. **Fans**
7. **Bubble wands**
8. **Fluid Tank**
9. **Front Fans**

## **OPERATION:**

1. Place the machine on a level surface.
2. Fill the Fluid Tank (8) with Bubble Fluid, keep the fluid below the mounting screws located in the tank but ensure the bubble wands (7) pass through the liquid.
3. Connect the mains power (1) and switch on the power switch for operation (2), switch off to stop the machine.
4. If you wish to use the separate remote control, connect the mains (1) and switch the mains switch on the remote control switch on (3) use the separate remote control (5) to then switch on or off the machine.
5. If the fluid starts to run out stop and refill the machine.
6. To drain the machine after use turn the fluid drain tap (4) on and drain the machine.
7. Always wash the machine after use to avoid leaving bubble fluid residue in the machine.

## TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Mains power not working	Check the fuse.	Replace fuse if blown 2amp
	Mains switch not turned on	Switch on Mains switch (2)
Wands not turning when mains switched on	Wands are jammed by any foreign objects. Wands have become loose during transit from spindle.	Switch off machine and remove any obstruction. Check wands are secured to spindle
Remote Control not working	Remote switch on the machine (3) not switched to on position. Battery in the remote has run down	Switch on remote switch (3) Replace battery in remote control.
Fluid leaking from the machine	Ensure fluid outlet tap is closed (4)	Close Tap (4)

## Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.
- The machine must be cleaned after use to avoid corrosion due to bubble fluids being corrosive if left in the machine.

Distributed in the UK by



Tel: 01458.833186

E-mail: [info@batmink.co.uk](mailto:info@batmink.co.uk)

Web: [www.batmink.co.uk](http://www.batmink.co.uk)