

Snow Machine



Instructions for use


Snow Machine (EFF710)

- **Dimensions: 58cm x 33cm x 35cm**
- **Weight: 10Kg**
- **Voltage: 240volt 50hz**
- **Wattage: 1500watt**
- **Spray Range: 4-5metres**
- **Capacity: 5 litre**
- **Run time on tank: 30 minutes continuous**
- **Remote control supplied**
- **Simple Operation and repeat Use.**

To obtain the best performance from your snow machine please read the instructions before use.

1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
2. This machine is designed to be used in conjunction with snow fluid which is purchased separately.
3. When using the product keep the unit level, or slightly tilted to blow the snow above peoples heads.
4. Snow fluid will leave a slippery residue, care should be taken to avoid injury.
5. Always wash the machine thoroughly after use by running the machine with distilled water to avoid corrosion which will invalidate the warranty.

EFX (Entertainment FX)

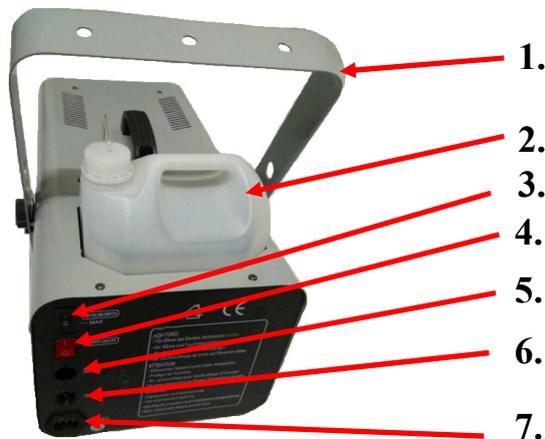

1. **Hanging Bracket**
2. **Snow Fluid Container**
3. **Volume switch**
4. **Mains on/off switch**
5. **Remote Control Inlet**
6. **Remote Control Outlet**
7. **Mains input.**



OPERATION:

1. Place the machine on a level surface or suspend by the bracket (1) on a stand
2. Fill the Fluid Tank (2) with Snow Fluid.
3. Connect the mains power (7) and switch on the power switch for operation (4), switch off to stop the machine.
4. If you wish to increase the output then engage the volume switch (3)
5. If the fluid starts to run out stop and refill the machine.
6. If you wish to use the remote control plug into socket (5) labelled inlet and then use the remote to operate the machine.
7. Additional machines can be linked from the remote control output to engage several machines at the same time.
8. For best results it is advised to switch on and off the machine in short bursts.
9. Drain the machine after use
10. Always wash the machine regularly to avoid leaving snow fluid residue in the machine. Wash the machine through with distilled water.

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Mains power not working	Check the fuse.	Replace fuse if blown 2amp
	Mains switch not turned on	Switch on Mains switch (4)
Snow not being generated	Remote control set at too low a level.	Increase the control on the remote control to increase output.
Snow leaving a residue on the floor	This will occur as the snow fluid is a foam water based fluid.	Care should be taken that the machine is used away from any public access to avoid slipping.
Empty & Clean Machine	Pour excess fluid from the machine	Wash through with clean water and dry.

Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.
- The machine must be cleaned after use to avoid corrosion due to snow fluids being corrosive if left in the machine.

Distributed in the UK by



Tel: 01458.833186

E-mail: info@batmink.co.uk

Web: www.batmink.co.uk