

## **Fogger Smoke Machine 3000**



### **Instructions for use**

 
#### **Fogger 3000 (EFF732)**

- Dimensions: 67cm x 44cm x 38cm
- Weight: 10 Kg
- Voltage: 240volt 50 Hz
- Power: 3000watt
- Output: 30,000 cuft/minute
- Warm up Time: 5-7 minutes
- Fog Time: 30 seconds maximum
- Wireless Remote Control
- DMX 512: 1 channel
- Simple Operation and repeat Use.

**To obtain the best performance from your Fog Machine please read the instructions before use.**

1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
2. This machine is designed to be used in conjunction with a Visage DJ smoke fluid which is purchased separately.
3. When using the product aim above the heads or feet of people, never point the product at a person.

# EFX (Entertainment FX)

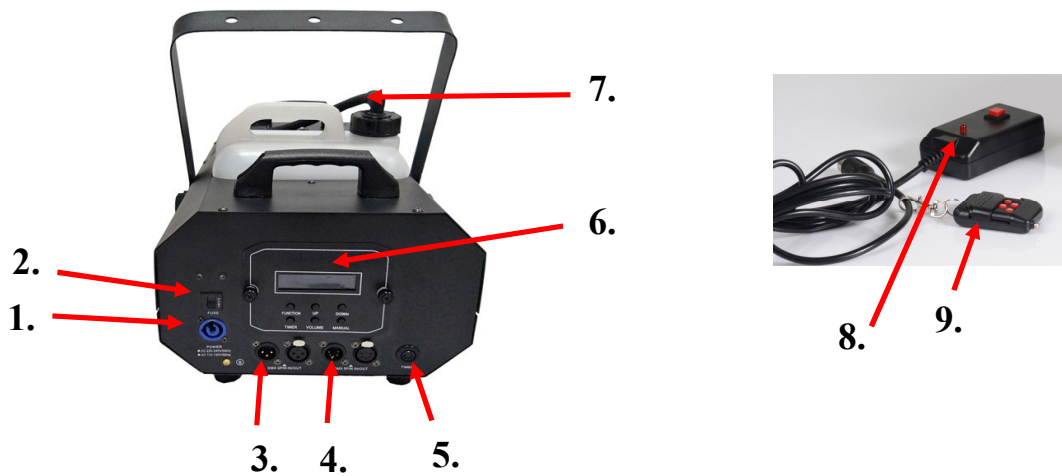

1. **Mains inlet**
2. **Fuse**
3. **DMX inlet**
4. **DMX Outlet**
5. **Remote Control inlet**
6. **LCD Display**
7. **Smoke Fluid Tank**
8. **Remote Control**
9. **Wireless remote**
10. **LED Indicators heating/low fog**

## OPERATION:

1. Fill the machine with a smoke fluid (7) (use Visage DJ mix Fluid)
2. Plug in the mains lead (1) and switch on (2), the machine will take approximately 5 minutes to reach operational temperature.
3. Plug in the remote control (9) into the socket on the rear of the machine (5).
4. The LED on the remote (9) will illuminate red while the machine is heating, when the LED turns green the machine is ready for operation.
5. To operate the machine simply press the button on the remote (9), the machine will then blast a smoke.
6. It is recommended to press the button in blasts for the best effect. After 30 seconds the machine must be given time to reheat. The LED on the remote will turn back red when the unit requires reheating.
7. Alternatively you can simply press the Burst button on the rear of the machine to manually operate.
8. To operate via DMX, press FUNCTION key until display says DMX set the address using up/down buttons. (uses one channel of DMX).
9. The FUNCTION key allows access to the programs, including the INTERVAL and DURATION, allowing you to set the time in seconds between bursts and how long the bursts using the up/down keys.

# EFX (Entertainment FX)

## CLEANING THE MACHINE

The machine should be regularly cleaned to ensure the best performance is obtained, it is recommended after 40 hours use.

1. Ensure the machine is disconnected from the mains and dismember the spray nozzle on the front of the machine.
2. Empty the fluid tank and refill using a mix of 80% distilled water and 20% white vinegar.
3. Switch on and heat the machine and once ready press the smoke button to run the water vinegar mixture through the machine to clean.
4. Separately clean the spray nozzle in a white vinegar.
5. Once everything has been cleaned reassemble the machine and it is now ready for use.
6. Use only recommended smoke fluid (Visage DJ Smoke Fluid).

## TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Machine not producing smoke.	Ensure machine is connected to the mains and heating (remote control has LED illuminated Red). Machine out of fluid. Machine stopped after 30 seconds	Connect machine to mains and check indicator. Machine has not fully heated takes 5 minutes from switch on. Fill with fluid. Machine needs to reheat after 30 seconds (red LED illuminated) wait until turns green
DMX not working	Possible faulty cable. Incorrect address	Check Cables. Check DMX address is correct

## Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.

Distributed in the UK by



Tel: 01458.833186

E-mail: [info@batmink.co.uk](mailto:info@batmink.co.uk)

Web: [www.batmink.co.uk](http://www.batmink.co.uk)