

Kabuki Power Drop DMX Device



Instructions for use

Kabuki Power Drop DMX (EFF800)

- Dimensions: 31cm x 13cm x 13cm
- Weight: 1.4Kg
- Voltage: 240volt 50Hz
- Power Consumption: 100watt
- Manual and DMX operated
- Maximum load 25Kg
- Simple Operation and repeat Use

To obtain the best performance from your Kabuki Power Drop please read the instructions before use.

- 1. Before use please check the machine to ensure no damage has occurred during transit, in the event of any damage do not use the product and contact your dealer.
- 2. This machine is designed to be used in conjunction with multiple units for synchronised dropping of drapes for reveals.
- 3. The unit is normally clamped to a truss or scaffold poles via a standard hanging clamp (not included with the product)
- 4. Each unit has a mains power in and DMX in/Out XLR plug/socket
- 5. This unit can be set for manual operation by selecting the appropriate setting on the DMX switches.





- 1. Mains Power inlet
- 2. Power indicator LED
- 3. On/Off Power Switch
- 4. DMX In/Out XLR Sockets
- 5. Mains Fuse
- 6. DMX Dip Switches
- 7. Resetting for hook clamp

OPERATION:

- 1. Install the Kabuki device by hanging on a truss or scaffold bar where required.
- 2. Your drape can then be hung on the internal hook clamp and reset using the push switch (7).
- 3. Connect the mains power (1)
- 4. switch on power (3) and LED will illuminate (2)
- 5. If you intend to operate via DMX connect the dmx cables to your controller.
- 6. Set the dmx channels using the dip switches the unit uses one channel for on or off operation.
- 7. The unit can be set to manual (via dip switches) and simply switching off the power will release the clamp



TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
The drape will not release from the Kabuki device	Mains power lead not con- nected correctly.	Check the mains lead and con- nect.
	Weight is over 25Kg	Reduce the weight until under 25Kg
	The curtain is not hung ver- tically	Curtains must be hung verti- cally
DMX not operating	DMX address not set	Use the dip switches to set the DMX channel

Warranty

This product carries a 1 year warranty from the date of purchase subject to the following conditions:

- This warranty is only valid for products used in accordance with the manufacturer's Instructions.
- This product must not be modified or changed in any way. Any such modifications will invalidate this warranty.
- Proof of purchase will be required in order to validate warranty.
- No responsibility or liability is accepted for any direct or consequential damage, loss or other expense arising from misuse, or incorrect installation or operation of this appliance.

Distributed in the UK by



Tel: 01458.833186 E-mail: info@batmink.co.uk Web: www.batmink.co.uk