


VERY IMPORTANT

The floor must be laid in the correct way to avoid damage.

When dismantling follow the procedure in reverse, ie start with the last panel laid and work backwards.

This will avoid breaking the plastic interlocking clips.

Failure to take note of this instruction will result in you being charged for broken Clips.

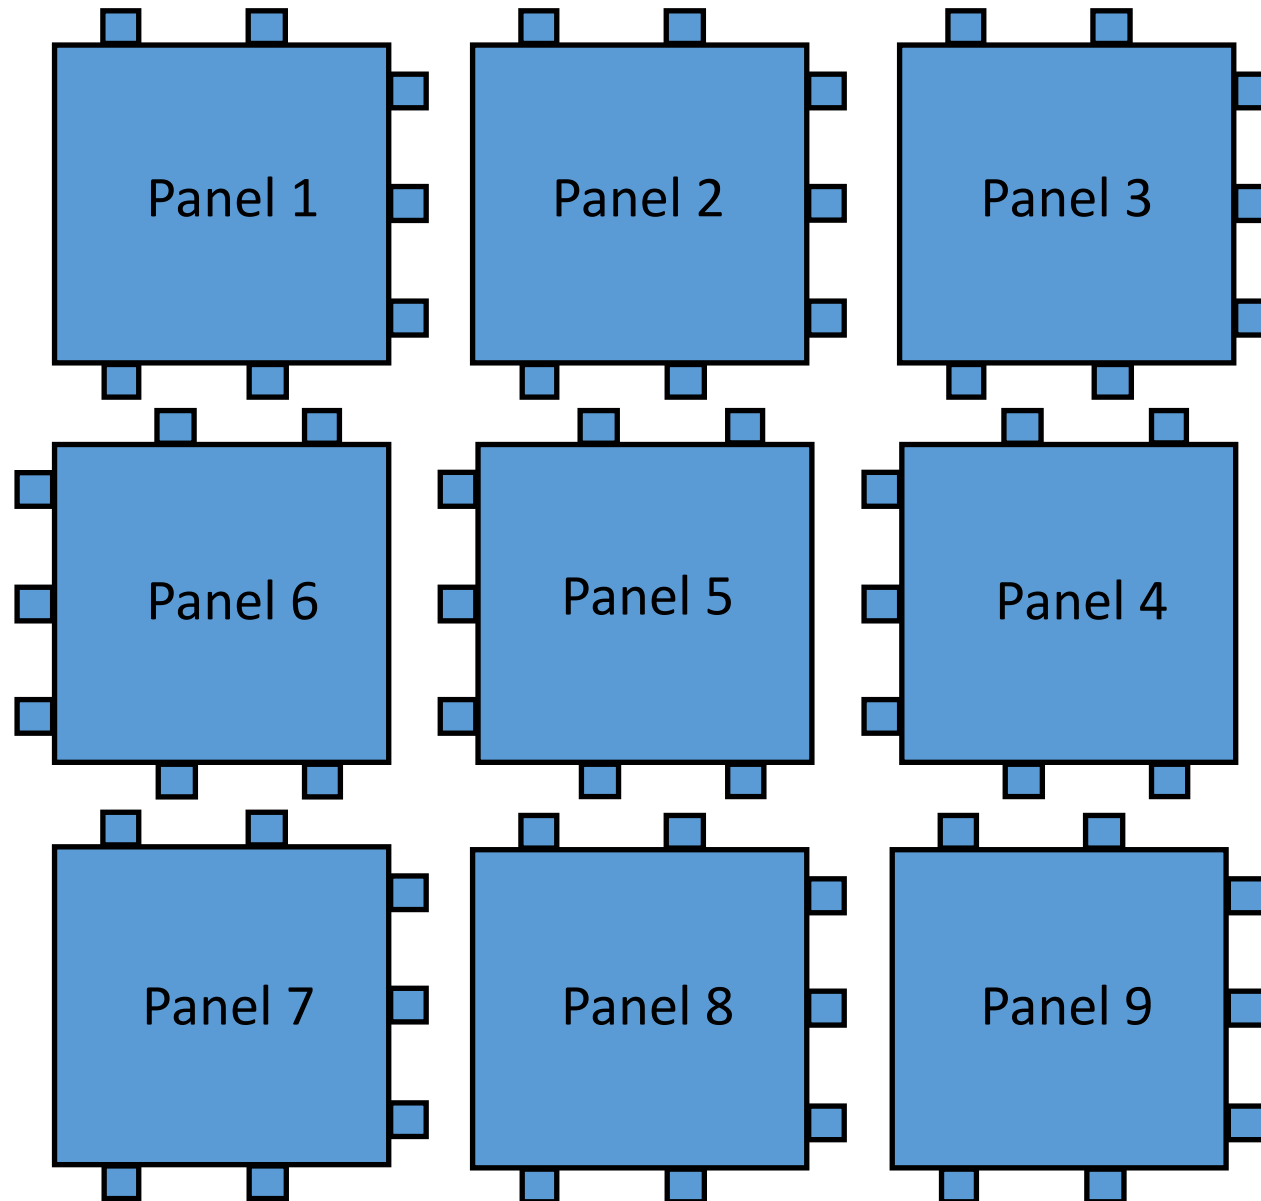

Row 1– start at the top left hand corner by placing the first panel with the three “end” lugs pointing to the right, then repeat with the second panel etc. Continue to lay the first row with as many panels as required. Make sure the panels are all flush to ensure the aluminium edge fits correctly.

Once completing the first row fit the aluminium edge before commencing with the second row.

The second row starts from the right hand side with the three “end” lugs pointing to the left, the panels will simply slot under the first row to secure one another. Repeat for as many panels as required.

The third row simply follows by rotating the panel through 180° so the three end lugs are pointing to the right.

Continue until your floor is complete then add the edging for the remaining three sides.

Please follow the diagram opposite following the panels in numerical order.